

PHILIPS

Audio/Video

SRP6219G/27

SRP6229G/27

SRP6239R/27

SRP6249B/27



User manual

Table of Contents

Introduction	2
Setup	3
Button Functions.....	4
Programming Your Remote	6
Direct Code Entry	6
Auto Code Search.....	7
Controlling Combo Devices	9
Using Your Remote	10
Primary Audio Control	10
Code Identification.....	11
Reset to Factory Settings.....	11
Troubleshooting	12
Warranty.....	13
FCC Statement	14

Congratulations on your purchase of this **Philips** branded **Universal Remote Control**. This remote is capable of operating thousands of audio/video devices including **TVs, Blu-ray™/DVD players, streaming media players, sound bars, cable receivers** and more!

Setup

Your universal remote requires two (2) AAA batteries (not included). Alkaline batteries are recommended.

Battery Installation

1. On the back of the remote, pull down on the textured surface and slide battery cover downward to remove.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA batteries. Be sure to use fresh batteries.
3. Position battery cover slightly below opening and push upward to lock into place.

NOTE. *If your remote stops operating properly, replace the batteries with new ones.*

Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.


Battery Saver

Your remote automatically turns off if the buttons are depressed more than 8 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

Code Saver

You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.

Button Functions

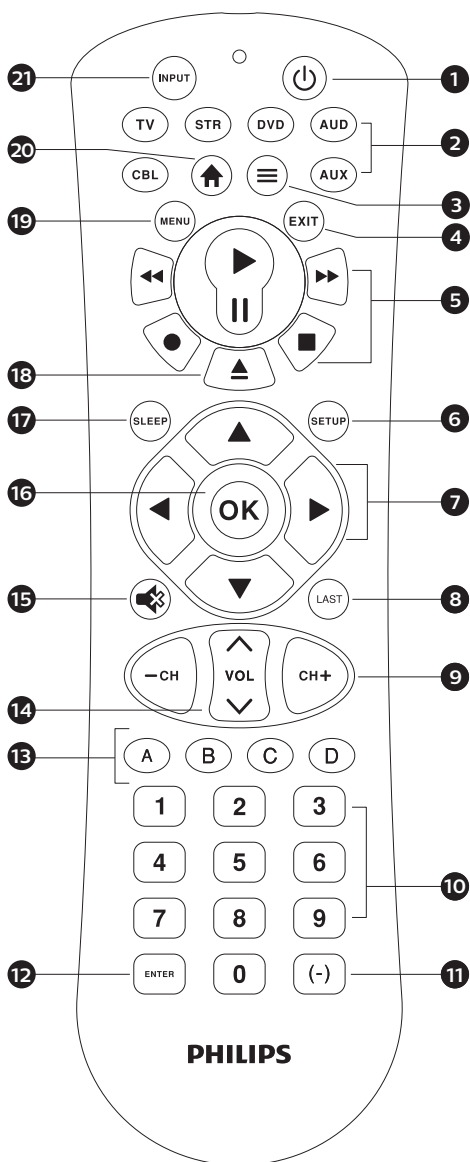

Button Functions

1. **Power** - Turns devices ON/OFF
2. **TV, STR, DVD, AUD, CBL, AUX** - Selects the device to control
3. **Info/Options** - Displays on-screen show/content information
4. **Exit** - Exit on-screen menus
5. **Record, play, stop, rewind, fast forward, pause**
6. **Setup** - Used to program the remote
7. **Up/down/left/right menu navigation**
8. **Last channel** - Returns to the previously selected channel
9. **Channel up/down**
10. **Numbers** - Enter numbers for direct channel selection
11. **Dash (-)** - Use to select digital channels, e.g., 4.1
12. **Enter** key (Some devices require **enter** to be pressed after channel selection)
13. **ABCD** - Access additional features for DVRs, cable and satellite receivers
14. **Volume up/down**
15. **Mute** - Mutes sound
16. **Ok** - Selects menu items for the controlled device
17. **Sleep** - Sleep timer functions
18. **DVD/Blu-ray™ open/close** - open/close a player, or **List** features on cable/satellite receivers
19. **Menu** - Displays the on-screen menu
20. **Home/Guide** - Easily access features on today's streaming devices, or **Guide** on cable/satellite receivers
21. **Input** - Selects video inputs

Programming Your Remote

Your remote is designed to control multiple audio/video devices. To use, you will need to program the remote for your devices. There are two different methods you can use to program the remote, **Direct Code Entry** or **Auto Code Search**.

- The **Direct Code Entry** method is the recommended method as it is the simplest and quickest method in most cases.
- The **Auto Code Search** method searches through all the codes in the remote to find a code for your device.

NOTE. This remote comes preprogrammed for Roku® boxes and Samsung TVs. Press **TV** for Samsung TVs and **STR** for Roku boxes.

Direct Code Entry (Recommended)

1. Locate the **Code List** included with your remote. Find the section for the type of device you wish to control, (for example **TV, STR, DVD, AUD, CBL, AUX**). Locate the brand of your device and all the remote codes for the brand.

2. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.

NOTE. The red light will either be a small light at the top of the remote or the power ON/OFF button.


3. Press and release the device button on the remote for the type of device you wish to control, (for example **TV, STR, DVD, AUD, CBL, AUX**). The red light will blink once and remain on.

NOTE. Any of the device buttons on the remote can be programmed to control any of your devices. For example, you can use the aux device button on the remote to

A circular icon with a thin black border. Inside the circle, the word "SETUP" is written in a bold, sans-serif, uppercase font.A circular icon with a thin black border. Inside the circle, the letters "TV" are written in a bold, sans-serif, uppercase font.

Programming Your Remote

control a Satellite Receiver, Digital Converter Box, Streaming Media Player or any device category in the **Code List**.

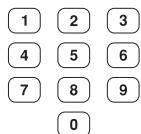

4. Use the number buttons on the remote to enter the first 4-digit remote code in the Code List in Step 1. The red light will turn off after entering the fourth digit.



5. Point the remote at the device. Test the buttons on the remote to see if the device responds as you would expect. If the buttons do not operate the device, return to Step 2 above and use the next code for that device.
6. Repeat steps 1 – 5 for each device you wish to control.

Programming Notes

- Some codes may operate only a few functions of your device. There may be another code in the **Code List** that controls more functions. Test other codes in the **Code List** for more functionality.
- If you do not find a remote code that works your device or there are no codes in the **Code List** for your device, use the **Auto Code Search** method in the next section to program your remote.
- For combination devices such as a TV/DVD combo or TV/VCR combo, you may have to enter a code for each device.
- Write down the remote codes used to program the remote for future reference.

Auto Code Search

The Auto Code Search is a process where you can search through all the codes stored in the remote to find a code for your device. It is recommended that you read through all the steps below to familiarize yourself with the **Auto Code Search** before starting the process.

Programming Your Remote

1. Manually turn on the device you wish to control.

NOTE• The Auto Code Search process cannot be used for devices without power ON/OFF capability. Use the Direct Code Entry method in these cases.

2. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.

A circular icon with a thin black border. Inside the circle, the word "SETUP" is written in a sans-serif font.

NOTE• The red light will either be a small light at the top of the remote or the power ON/OFF button.

3. Press and release the device button on the remote for the type of device you wish to control, (for example **TV, STR, DVD, AUD, CBL, AUX**). The red light will blink once and remain on.

A circular icon with a thin black border. Inside the circle, the word "TV" is written in a sans-serif font.

4. With the remote pointed at the device, press and release the **POWER** button on the remote. The remote will send 10 different codes to the device. The red light will blink once for each code and remain on after sending the 10 codes.

A circular icon with a thin black border. Inside the circle is a power button symbol, consisting of a circle with a vertical line through its center.

Did the device turn off?

- If **YES**, go to Step 5.
- If **NO**, repeat Step 4 to test the next 10 codes.

5. Manually turn the device back on.

6. With the remote pointed at the device, press and release the **VOL ^** button. The remote will re-send the first code of the 10 codes from Step 4. The red light will blink once and remain on.

A rectangular icon with a thin black border. Inside the rectangle is a volume up arrow symbol, consisting of a triangle pointing upwards.

VOL

Did the device turn off?

- If **YES**, you have found a code for the device. Press and release the same device button

Programming Your Remote

you pressed in Step 3. This will store the code in the remote. Go to Step 7.

- If **NO**, continue to press and release the **VOL ^** button until the device turns off to test the other 9 codes from Step 4. Be sure to wait approximately 3 seconds after each **VOL ^** button press to allow the device time to respond to the code. When the device turns off, you have found a code for your device. Press and release the same device button pressed in Step 3. This will store the code in the remote. Go to Step 7.

NOTE:



- The **VOL V** button can be used to go backwards through each batch of 10 codes.
- The red indicator light will flash 2 times after testing the first or last code in each batch of 10.

7. Use the remote to turn the device back on. Test the buttons on the remote to see if the device responds as you would expect. If the buttons do not operate the device, return to Step 2 and repeat this process to search for a better code to operate the device.
8. Repeat this process for each device you wish to control.

Controlling Combo Devices

Some combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different device buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you may need to set up one code under the **TV** button to control the TV and a separate code under the **DVD** button to control the DVD.

Using Your Remote

Primary Audio Control

The **Primary Audio Control** feature allows you to select a single device that the volume buttons always control. For example, the remote can be in TV mode while the volume buttons control the volume on your audio receiver or sound bar instead of your TV.

Enabling the Primary Audio Control



1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.



2. Press and release the device button (**TV, AUD, etc.**) on the remote for the device you wish to control the volume.



3. Press and release the **MUTE** button.



4. Press and release the **VOL ▲** button. The red light will blink twice and turn off.

Disabling the Primary Audio Control



1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.



2. Press and release the device button (**TV, AUD, etc.**) programmed to control the Master Volume Feature.






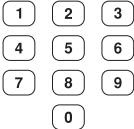

3. Press and release the **MUTE** button.






4. Press and release the **VOL ▼** button. The red light will blink twice and turn off.

Using Your Remote

Code Identification

-  1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
-  2. Press and release the desired device button (**TV**, **STR**, **DVD**, **AUD**, **CBL**, **AUX**) you would like the code for.
-  3. Press and release the **ENTER** button.
-  4. Press and release the **#1** button. Count the number of times the remote light flashes. This is the number corresponding to the first digit of the code. Repeat the process by pressing the **#2**, **#3** and **#4** buttons for the remaining digits.
-  5. Press and release the **ENTER** button to exit this mode.

Reset to Factory Settings

-  1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
-  2. Press and release the **MUTE** button.
-  3. Press and release the number **#0** button. The red indicator light will flash twice.

Troubleshooting

Remote does not operate your device.

- Make sure the batteries are fresh and installed correctly.
- Aim the remote directly at your device, and make sure that there are no obstructions between the remote and device.
- Make sure you select the appropriate device on the remote you wish to control; TV for TV and CBL for cable box.
- Try programming the remote with a different code. See **Direct Code Entry** section.
- Remote may not be compatible with your device.

Remote does not operate some features of your device.

- Sometimes a particular code might operate a few features but not all. Try programming the remote with a different code from the **Code list**. See **Direct Code Entry** section.
- Remote may not be able to operate all features of your device or button names may be different than that of your original remotes.

90-Day Limited Warranty

This warrants this product to be free from manufacturing defects for a period of 90 days from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.



MADE IN CHINA

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of Jasco Products Company, and Jasco Products Company LLC, 10 E. Memorial Rd., Oklahoma City, OK 73114 is the warrantor in relation to this product.

This product comes with a 90-day warranty. Visit www.philips.com/support for warranty details.

Questions? Contact our U.S.-based Consumer Care at 1-844-816-0320 between 7AM-8PM, M-F, Central Time.

FCC Statement

Suppliers Declaration of Conformity |
Model #: SRP6219G/27 | Jasco Products Co.,
10 E. Memorial Rd, Oklahoma City, OK 73114,
www.byjasco.com

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ICES-3(B)/NMB-3(B).